Change of parameter settings:


**Step 1:**

When the power is off,push  together for 3 seconds.
Then it enter Parameter Setting;

Push  together skip to the next item

**Step 2:**

You will see 1,2,3...(representing the parameters as per table below) on the usual position of ""
And additionally the current parameter setting on the usual position of""

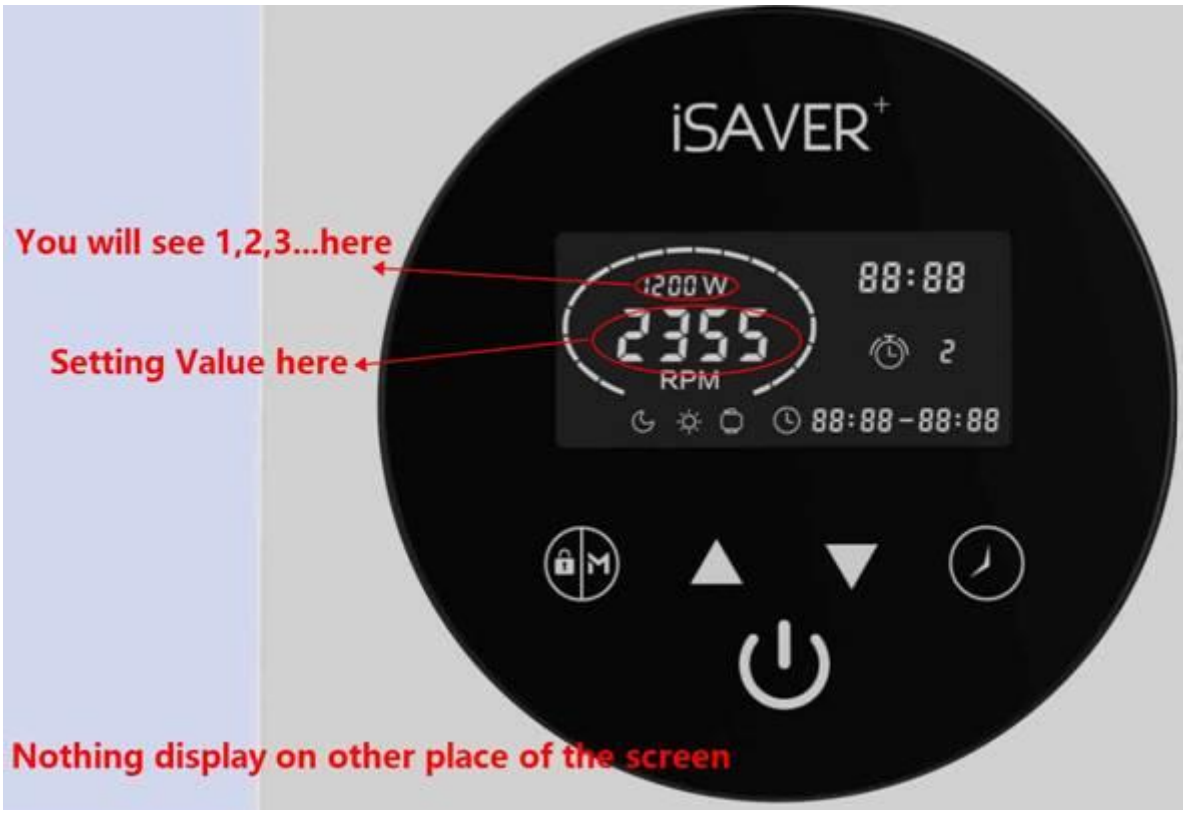


**Step 3:**

You can set e.g. the Di 2,3,4 Speed Value by push  or ,as the picture below:

| Item | Default | Address | Setting range |
|---|---|---|---|
| Selfpriming Time | 1min | 1 | 0~10 min,every step for 1 min |
| Lowest Speed | 1200 rpm | 2 | 1200~2900 rpm,every step 100 rpm |
| Di 2 Speed | 2900 rpm | 3 | 1200~2900 rpm,every step 100 rpm |
| Di 3 Speed | 2400 rpm | 4 | 1200~2900 rpm,every step 100 rpm |
| Di 4 Speed | 1200 rpm | 5 | 1200~2900 rpm,every step 100 rpm |
| Selfpriming Speed | 2900 rpm | 6 | 1200~2900 rpm,every step 100 rpm |